



TOUCHSTONE Air-Activated Controller Installation and Operating Instructions

Product Illustration:



Installation Instructions:

1. Plug the Heater power supply cord into the NEMA Socket on the front of the Control Box.
2. Plug the air tubing from the air button on the bathtub onto the Air Tube Nipple on the front of the Control Box.
3. Plug the Control Box into the standard wall outlet under the tub.
4. The Control Box must be installed with the nipple located in the lower right hand corner.
5. The Control Box must be installed on a vertical surface with a 6" clearance around all ventilation openings.

WARNING: Failure to install in strict accordance with each and every instruction above may cause the Control Box to fail, which may cause injury to persons and/or property

Operating Instructions:

The first press of the air button will start the Surface Heater. This will also start a 30-minute countdown timer which will automatically turn off the Surface Heater when time expires. The Surface Heater will run Full ON for 15-minutes then transition into a Pulse Mode (45 seconds OFF 60 seconds ON) If more time is desired after the Surface Heater turns off automatically, press the air button once again to start a new 30-minute session.

The second press of the air button will turn the Surface Heater off manually.

NOTES:

1. The run Timer is set once the user initially turns the Surface Heater ON. Timer will remain set until the 30-minutes expire.
2. If Surface Heater is turned OFF and back ON within 5 minutes of initial start, unit will automatically restart the "Regular" cycle with the remaining run Timer available.

WARNING: Use and follow these instructions along with all instructions that have been provided with your whirlpool bathtub in order to fully enjoy the bathtub safely.



TOUCHSTONE Air-Activated Controller Installation and Operating Instructions

Product Illustration:



Installation Instructions:

1. Plug the Heater power supply cord into the NEMA Socket on the front of the Control Box.
2. Plug the air tubing from the air button on the bathtub onto the Air Tube Nipple on the front of the Control Box.
3. Plug the Control Box into the standard wall outlet under the tub.
4. The Control Box must be installed with the nipple located in the lower right hand corner.
5. The Control Box must be installed on a vertical surface with a 6" clearance around all ventilation openings.

WARNING: Failure to install in strict accordance with each and every instruction above may cause the Control Box to fail, which may cause injury to persons and/or property

Operating Instructions:

The first press of the air button will start the Surface Heater. This will also start a 30-minute countdown timer which will automatically turn off the Surface Heater when time expires. The Surface Heater will run Full ON for 15-minutes then transition into a Pulse Mode (45 seconds OFF 60 seconds ON) If more time is desired after the Surface Heater turns off automatically, press the air button once again to start a new 30-minute session.

The second press of the air button will turn the Surface Heater off manually.

NOTES:

1. The run Timer is set once the user initially turns the Surface Heater ON. Timer will remain set until the 30-minutes expire.
2. If Surface Heater is turned OFF and back ON within 5 minutes of initial start, unit will automatically restart the "Regular" cycle with the remaining run Timer available.

WARNING: Use and follow these instructions along with all instructions that have been provided with your whirlpool bathtub in order to fully enjoy the bathtub safely.