


micrOzone System Installation Instructions

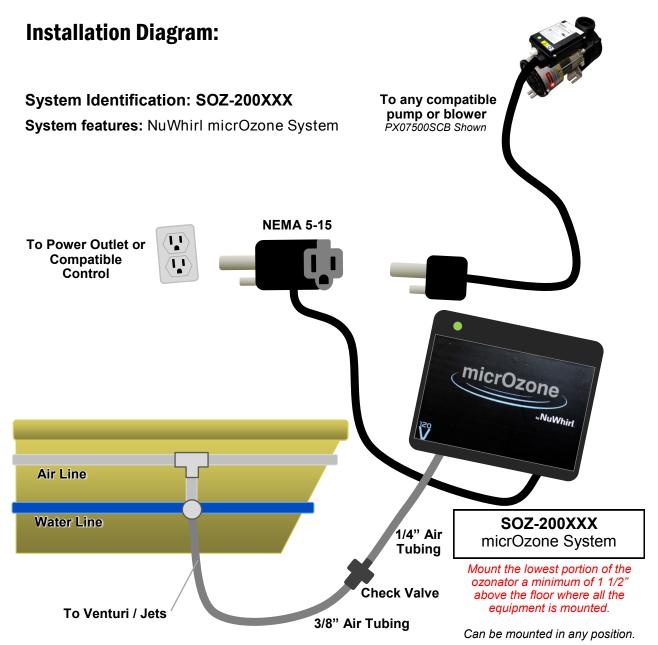

NOTES:

- Ventilation Required: Do not install within an enclosure that would restrict ventilation.
- No anti-siphon or condensate trap required. Ozone tubing can run directly from the ozone generator to the inlet venturi.
- Recommended Servicing: NuWhirl recommends that the check valve and tubing be changed annually.
- To be used in conjunction with all other product instructions published by NuWhirl.