



Retain this manual for future reference

**For your records and future reference
please fill in data below:**

Manufacturer: _____

Model: _____

Notes: _____

Date of Installation: _____



EnviroJet

**JE6PL-XX-Jet Face
VE25VFX-Jet Venturi
300150-Jet Body**

Installation Instructions

EnviroJet Water System: JE6PL-xx (Jet Face), VE25VFX (Jet Venturi), 300150 (Jet Body)

System features: 6.46 cm Jetface, 3/8" x 1" Vee Venturi, Jet Body, Metal Trim Ring

Installation Instructions


Note: Apply silicone prior to installation.

Step 1: Install trim ring with jet body (300150) into jet venturi (VE25VFX) and hand tighten.



Step 2: Use tool 500112 to tighten the jet body into venturi.

Note: Jet venture needs to be in its correct position. Temporary "Tool A" will be provided until 500112 is available.

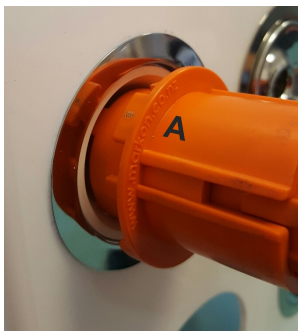

Step 3: Install jet face into wall body and then twist and lock into place with tool 500112 by turning in the clockwise direction.

Note: Temporary "Tool B" will be provided until 500112 is available.

